Assembly Instructions

TUMBLEWEED®

Worm Café®

Perfect for families to recycle kitchen scraps at home.

Recycles 5-6kg per week

Your worm farm comes with

1 x Lid

3 x Working Trays



1 x Collector Tray

4 x Legs

1 x Tap & Nut Set



1 x Worm Farm Bedding Block

1 x Packaging Wrap

1 x Worm Farming Guide

You will need

Bucket

5L of Water

1000 Composting Worms

Need worms?

scan here

Assembly

1. Find a convenient, shady position for your **Worm Café®.** Some ideas could be in your garden, near your kitchen or on your balcony.

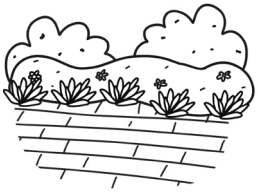

2. Disassemble the **Tap & Nut Set.** You should have 3 components: one Tap, Nut & O-Ring.

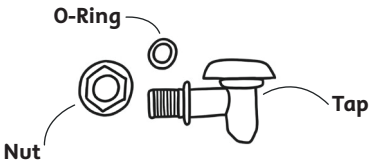

3. Fit the **Tap** through the hole at the front of the **Collector Tray** and tighten firmly with the **O-Ring** then the **Nut** on the inside. Turn the tap to the on position.

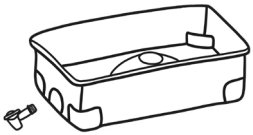

4. Slide all four **Legs** into the **Collector Tray.**

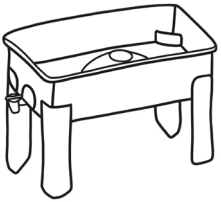

5. Place one **Working Tray** on top of the **Collector Tray.** Set your additional **Working Trays** aside - you won't need to add these for a few months.

6. Fold and place the **Packaging Wrap** that came with your **Worm Café®** into the base of the **Working Tray.**

7. Place the **Worm Farm Bedding Block** in a **Bucket** with **5L of Water** to expand. This will take approximately 10 minutes.

8. Spread the expanded **Worm Farm Bedding Block** on top of the wrap, add your worms and secure the lid.

Now that you have assembled your worm farm

Click here to download the ultimage guide to Worm Farming