FEED-O-MATIC

Automatic treadle feeder 5kg, 8kg, 12kg, 20kg.

PPC Winterproof

UV Protected

Made in Holland

Adjustable feed settings

INNOVATIVE PRODUCT

We have made some changes to our Feedomatic treadle feeder.
It is now possible to adjust the height of the feed distribution.

In the previous model there was only one setting for the feed distribution (comparable with setting one). Now we have created a second setting which allows you to regulate the feed distribution.

We have added an extra backplate to the inclined plate which opens when an animal steps on the treadle. The standard setting is setting one, the difference between setting one and two is 9 mm. By raising this backplate to setting two, there will be more space (9mm more) for the feed to go through.

Please make sure there is no feed in the feeder when you change the setting.

v. 02-2017

Adjustable minimum animal weight settings

The feeder can be operated by all poultry, the access to the food can be adjusted on basis of the weight of the animals. Each model of the Feedomatic has five different settings.

For animals of for example 500 grams, you choose bottom setting A and top setting 2 when you have a 5kg. or a 8kg. model of the Feedomatic. In case you have a 12kg. or a 20kg. model of the Feedomatic, you choose bottom setting A and top setting 1.

Model AF05F/AF08F

Top setting	Bottom setting A	Bottom setting B	Bottom setting C
1	**350 GR**	do not use	
2	**400 GR**	do not use	do not use
3	**750 GR**	do not use	
4	do not use	**1000 GR**	
5	do not use	**1400 GR**	

Model AF12F/AF20F

Top setting	Bottom setting A	Bottom setting B	Bottom setting C
1	**450 GR**	do not use	
2	**600 GR**	do not use	do not use
3	**1200 GR**	do not use	
4	do not use	**1600 GR**	
5	do not use	**2500 GR**	

Top weight setting

Bottom weight setting

Training your flock how to use the treadle feeder

Some animals need to get used to their new treadle feeder. Training them only takes approximately two or three days. Put a stone or a weight on the treadle to show the animal where the food is. Sometimes it might be helpful to keep the stone for a day or two on the treadle, this way the animals will discover themselves where the food is.

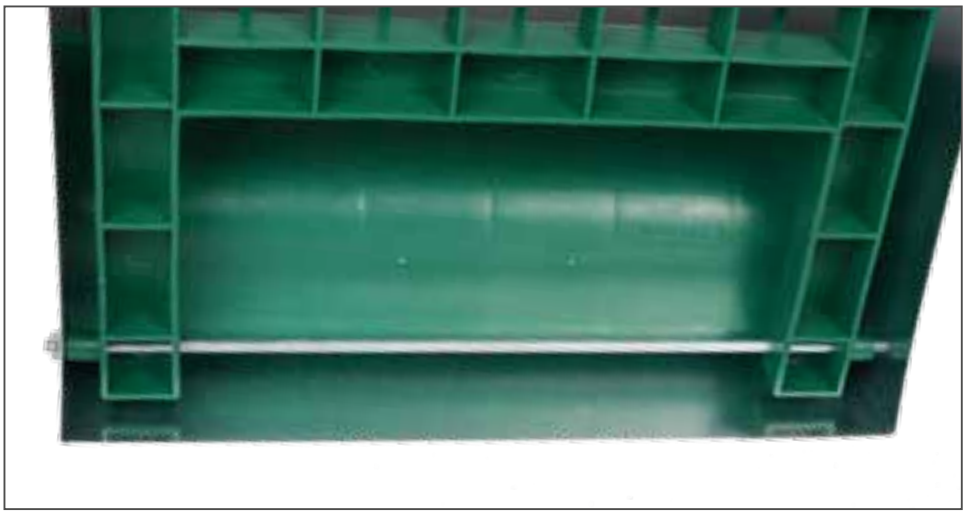

Parts

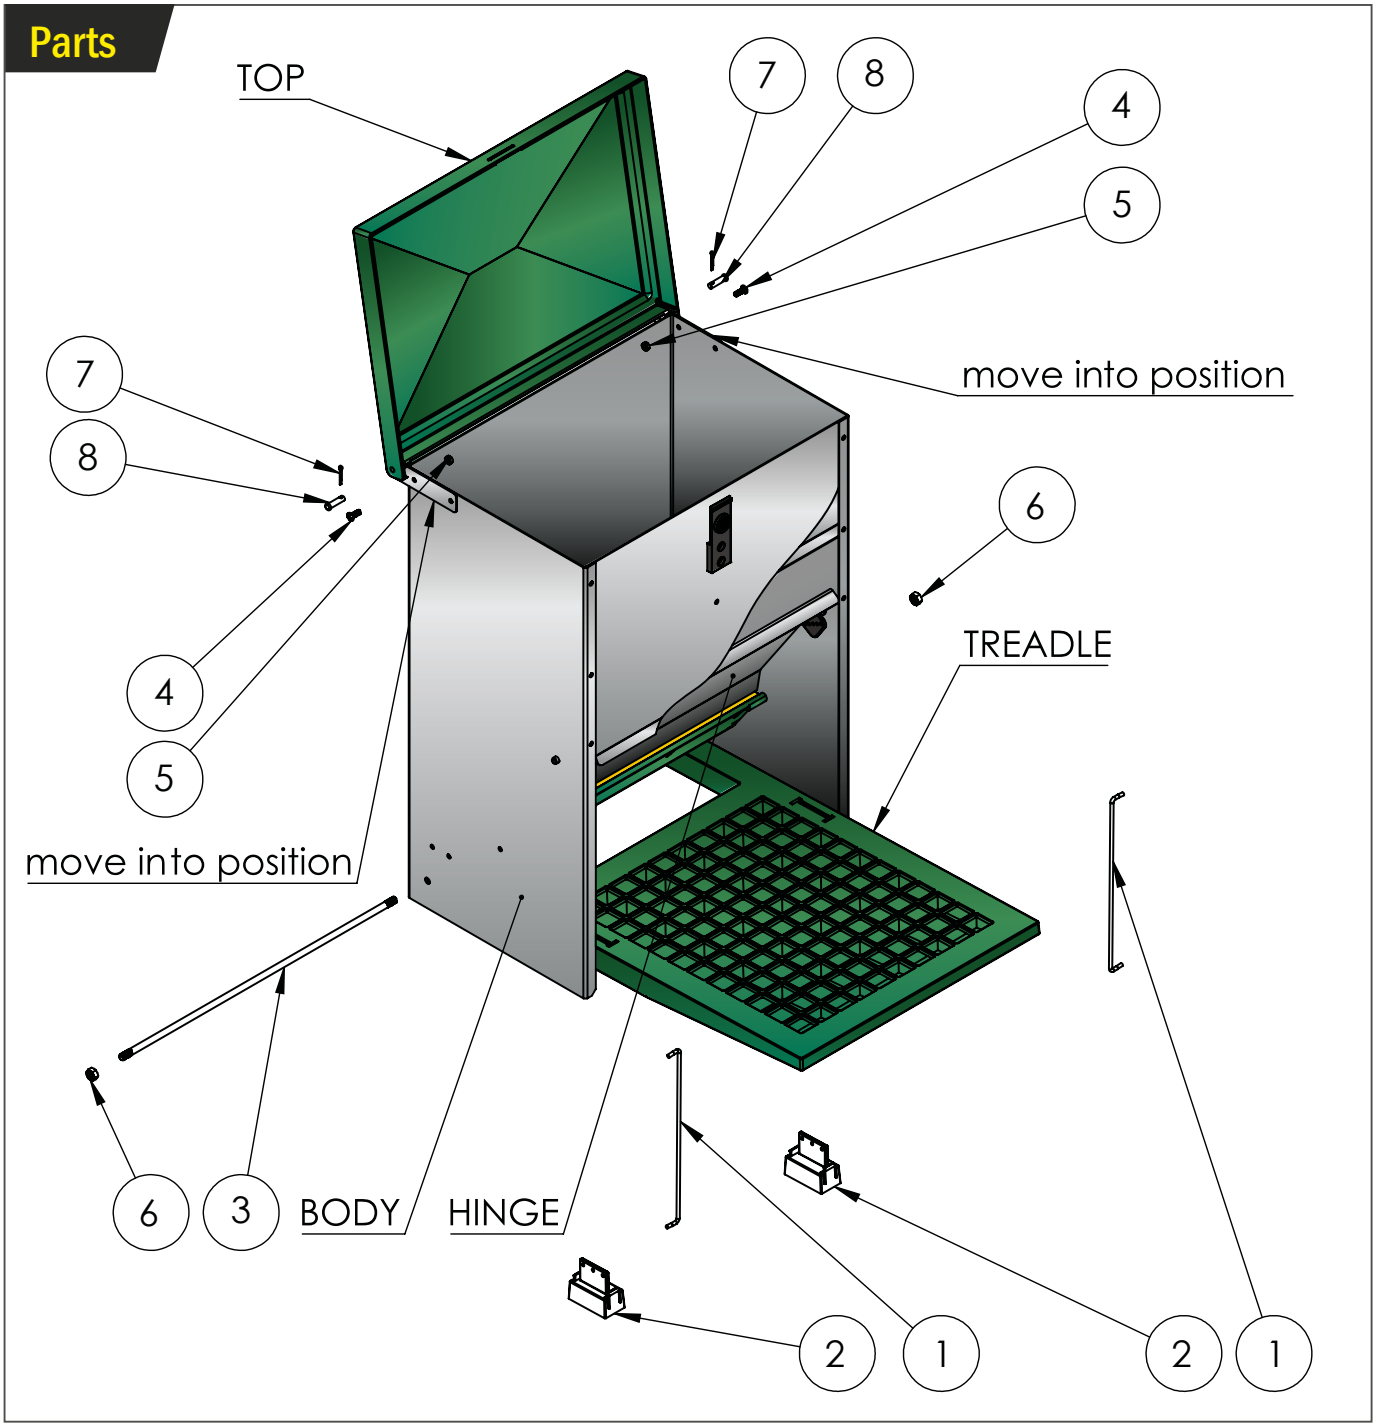

Item no.	Part number	Description	Qty.
1	Arm-c	Arm treadle/hinge	2
2	Hinge-tr-pl-c	Connector treadle	2
3	Shaft-bot-c	Shaft (M6)	1
4	Screw-m4	M4-Screw	2
5	M4-nut	M4-Nut	2
6	M6-nut	M6-Nut	2
7	Split-c	Split pin	2
8	Pin-c	Hinge pin	2

For AF05 and AF08 only

A) Mount/click treadle front (9A) on treadle back (9b)

B) Click connectors-treadle (2) in treadle

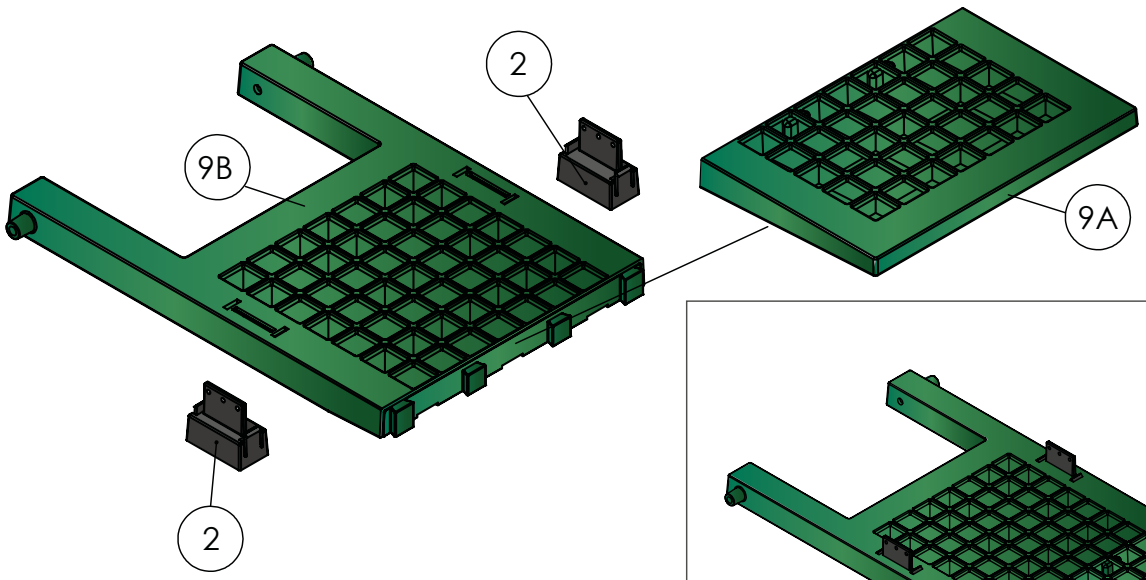

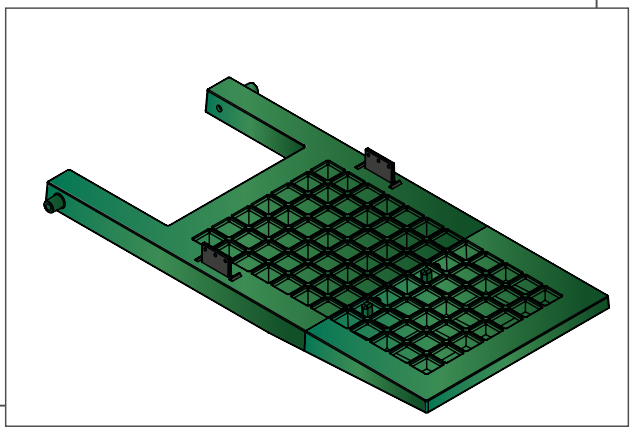

Go to step 2

1

Click connectors-treadle (2) in treadle (10)

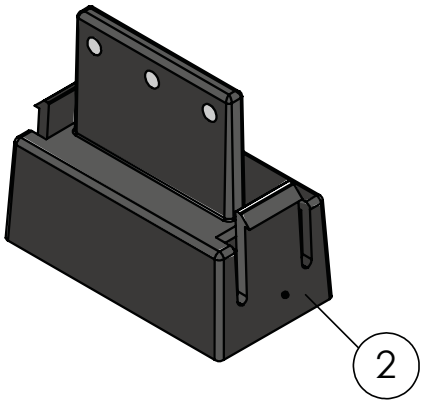

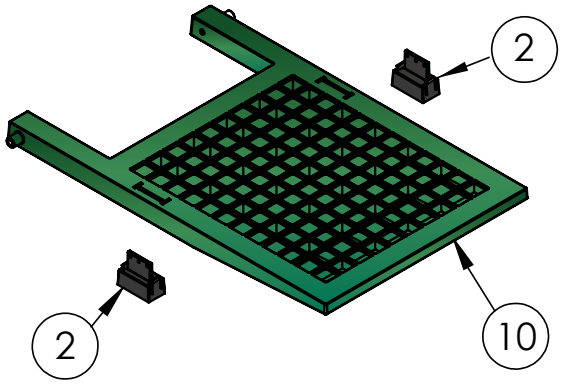

2

Mount bottom shaft (3) through body and treadle (10) with two M6-nuts (5)

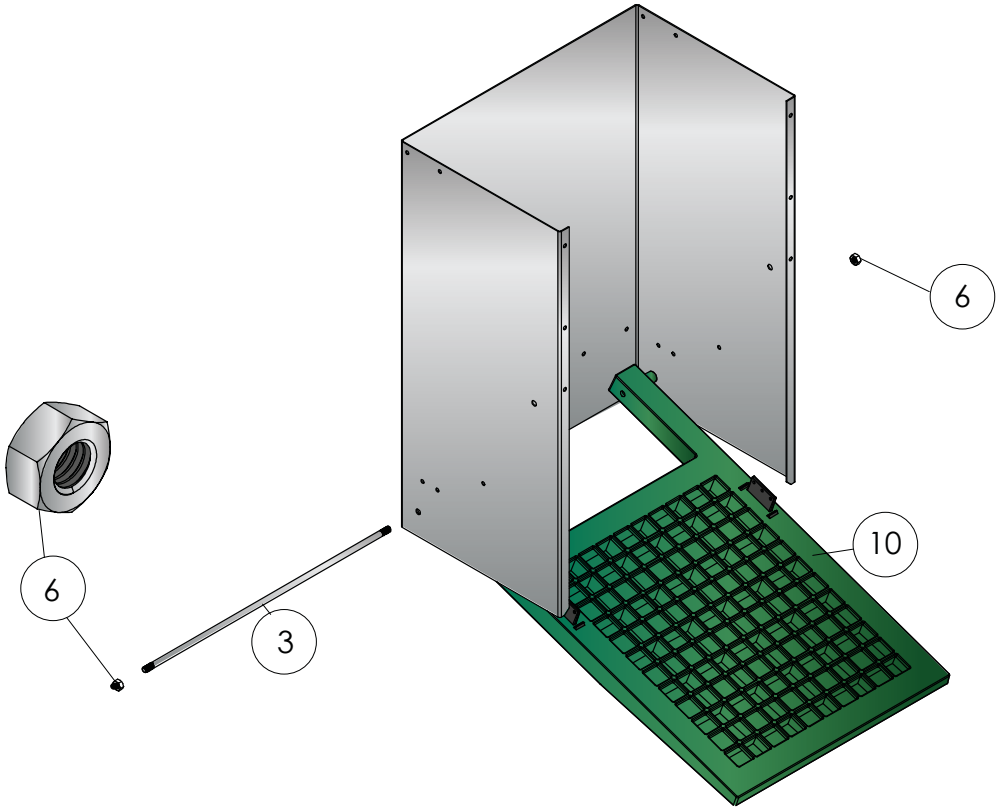

3

Mount connectors-treadle (2) and connectors hinge (11) with arms (1)

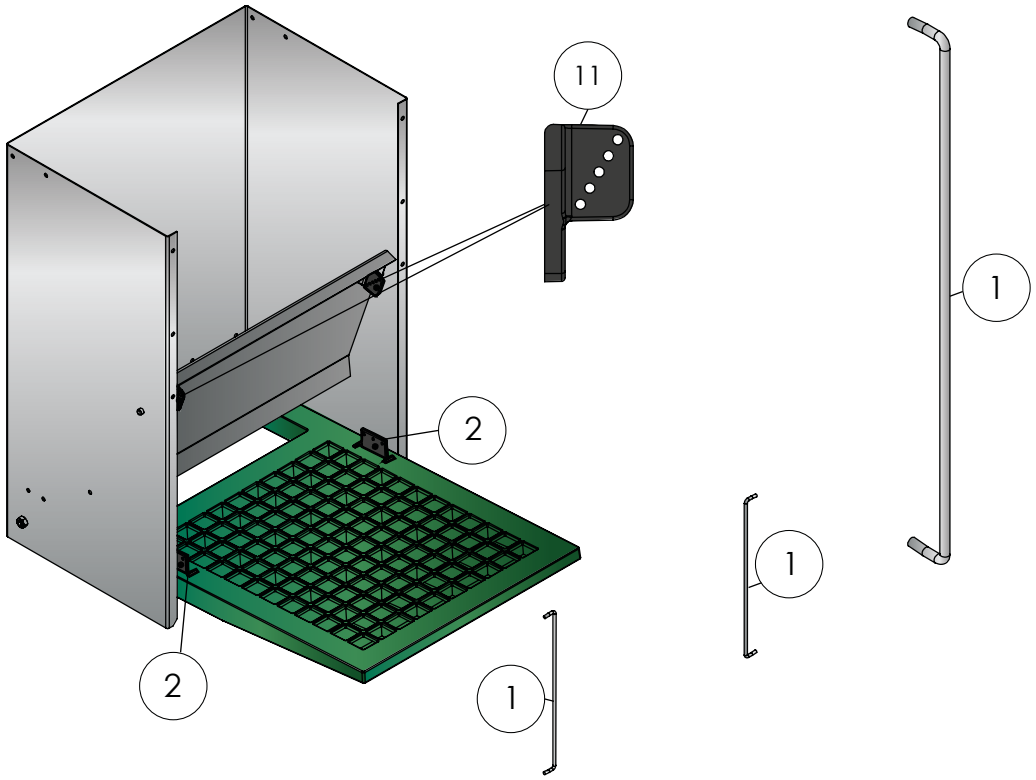

4

Move bracket (12) in to position, mount screw M4 (13) and nut M4 (4)

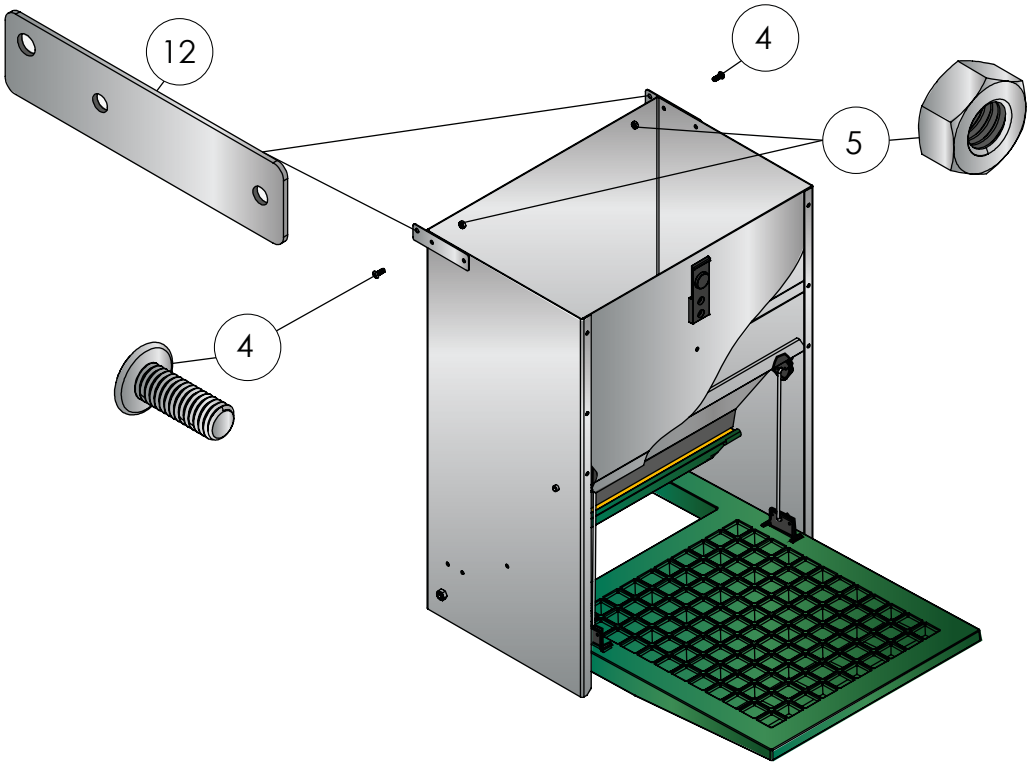

5
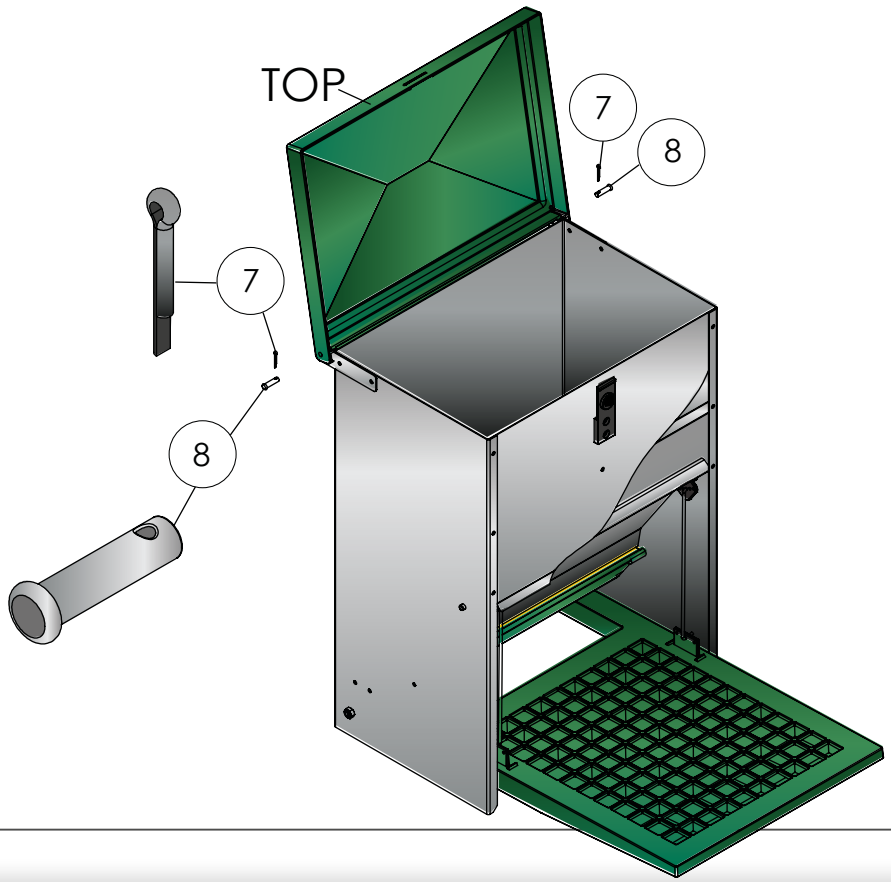
Mount top and secure the hinge pins (8) with split pins (7)